


R182 & TR182 Parts Catalog

Winterization

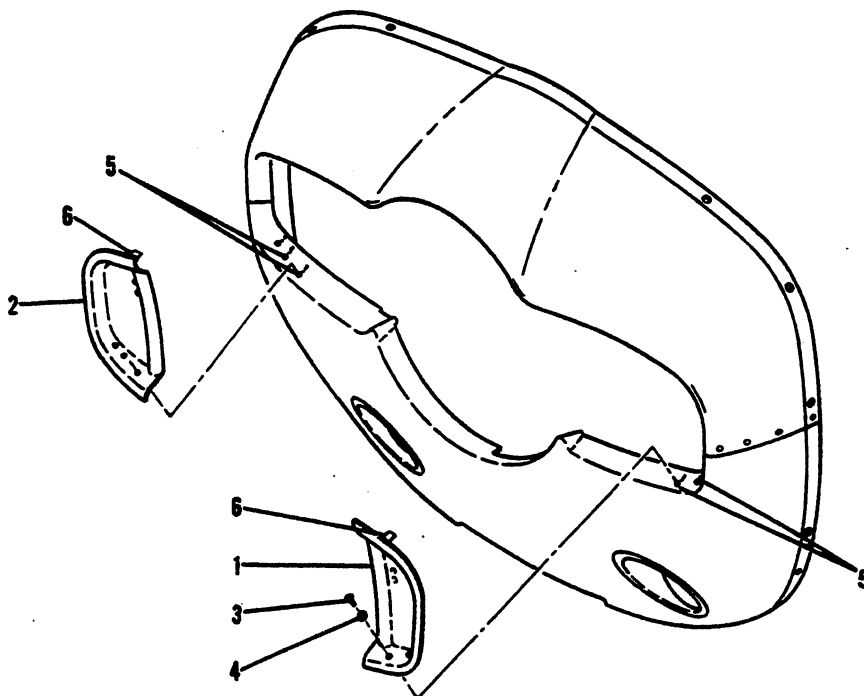

NOT APPLICABLE TO TR182

✓ R182 SERIAL R18200001 THRU R18201313
FR182 SERIAL FR18200001 THRU FR18200045

Figure 108. Winterization Equipment Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
108 -		WINTERIZATION EQUIPMENT INSTALLATION	NP	C
- 1	2201002-7	WINTER FRONT ASSY-LH	1	A
	2201002-11	WINTER FRONT ASSY-LH	1	B
- 2	2201002-8	WINTER FRONT ASSY-RH	1	A
	2201002-12	WINTER FRONT ASSY-RH	1	B
		ATTACHING PARTS		
- 3	AN520-10R10	SCREW	3	A
	AN520-10R10	SCREW	2	B
- 4	AN960-10L	WASHER	3	A
	AN960-10L	WASHER	2	B
- 5	NAS680A3	NUTPLATE	3	A
	NAS680A3	NUTPLATE	2	B
- 6	1752107-2	CLIP	1	B
		A---R182 SERIAL R18200001 THRU R18201051 ✓ R18201053 THRU R18201116 & R18201118 FR182 SERIAL FR18200001 THRU FR18200043 B---R182 SERIAL R18201052, R18201117 & R18201119 THRU R18201313 FR182 SERIAL FR18200044 THRU FR18200045 C---R182 SERIAL R18200001 THRU R18201313 FR182 SERIAL FR18200001 THRU FR18200045		